

Cleaning




Use-by date for milk




Note the use-by date above the sticker!

- 1.) **Caution: the dispensing head is hot!**
Clean the milk tube with the cleaning brush.
Refit the dispensing head after cleaning it with the brush

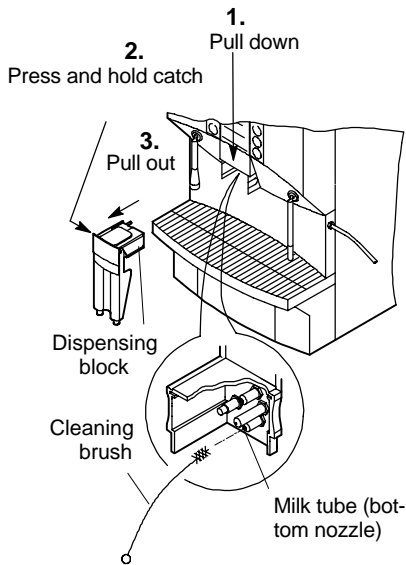

- 2.) **Add detergent – pump 7 times (add 4 ml BREMIL per 100 ml water – the equivalent of pumping once)**
Add approx. 0.7 litres cold water
Dip intake hose into detergent solution

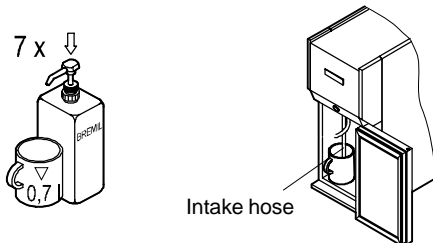

- 3.) **Press “Cleaning program” button**



Press + to Clean Milk Tube

Press “+” button



Cleaning cycle
1 12 rest time

Intermittent rinsing starts (duration: approx. 3 minutes)

- 4.) **Fill approx. 1 litre of clear cold water into a jug**



- 5.)

Press + To Rinse
2 Tube

Remove jug with detergent solution

Dip intake hose into jug of clear cold water

- 6.) **Press “+” button**




Rinsing Tube
Please wait

Rinsing starts (duration: approx. 1 minute)

- 7.)

Please insert
detergent tablet

Insert detergent tablet

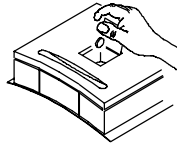

Press button



The automatic cleaning program starts (duration: approx. 3 minutes)

- 8.) When the following text is displayed at the end of the automatic cleaning program:

!!! STANDBY !!!

Empty grounds container



Dispensing block

- Clean with a grease-dissolving detergent,
- Rinse with clear water,
- Dry thoroughly

⚠ Caution: very hot!

